



MITER TRIM MATERIAL
AS REQUIRED

INSTALL MOUNTING CLIPS
AS SHOWN IN DETAIL

SNAP ON
TRIM

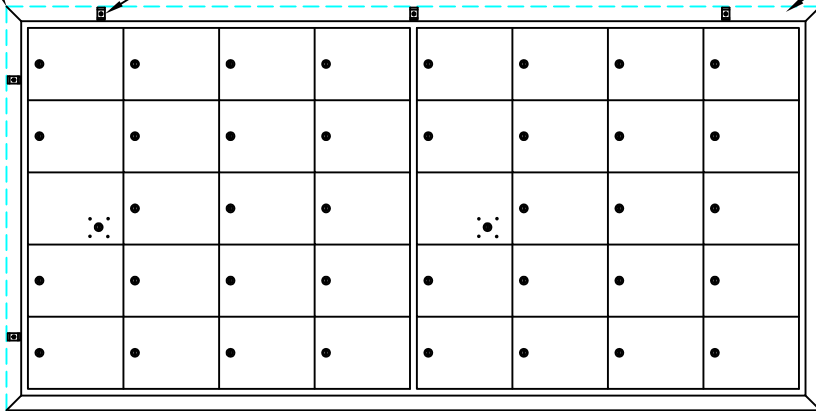

1. SCREW MOUNTING CLIP TO WALL USING 1/8" X 1-1/4" SCREWS
2. HOOK ONE EDGE OF TRIM OVER LEG OF CLIP AND SNAP TRIM OVER SECOND LEG OF CLIP

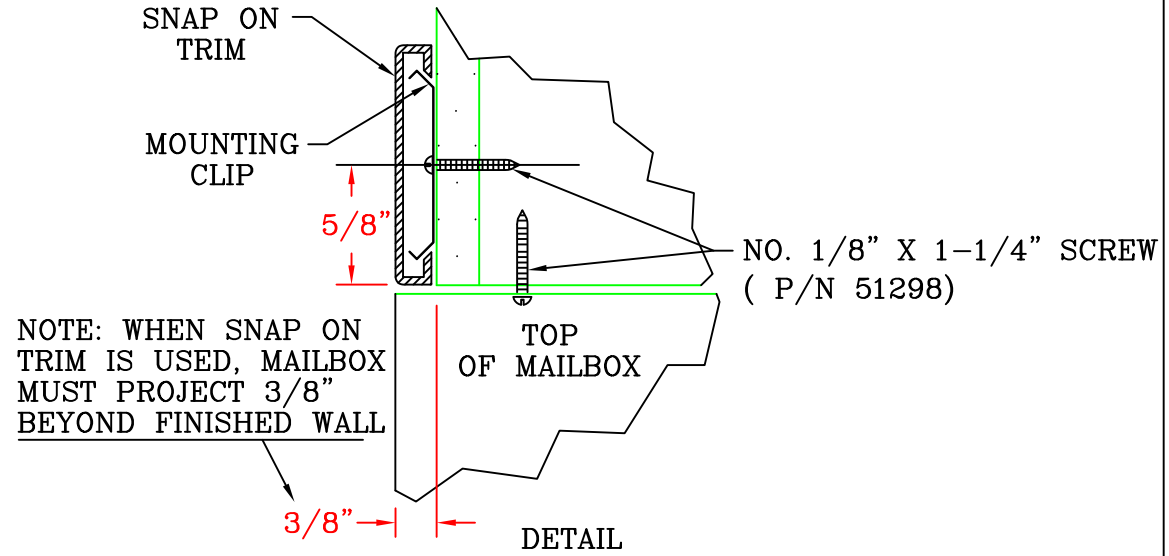

NOTE: WHEN SNAP ON
TRIM IS USED, MAILBOX
MUST PROJECT 3/8"
BEYOND FINISHED WALL

PRODUCT SERIES: INSTALLATION OF OPTIONAL SNAP-ON TRIM
FOR AF SERIES 14/1500, 1450/1550, 16/1700

FLORENCE
CORPORATION

5935 Corporate Drive • Manhattan, KS 66503
800.275.1747 • www.florencelockers.com

MODEL	REV	A
SCALE	NONE	LAST REV DATE 10/20/2017
DRAWING NUMBER	DRAWN BY	
CS2056	NBC	